



The installation of the Windsor Independent model walk-in bath

A couple of tips to keep in mind!



NOTE: The images used on page 3 and 5 of this guide are based on a bath with a right-hand sided door. If you are installing a bath with a left-hand sided door, you will need to mirror those images.

Transport the bath after delivery:



1. Baths transported upright on the pallet will have screws holding 2 legs of the bath to the pallet. These need to be removed so the bath can come off the pallet.
2. Remove the side panels so you can use the bath frame to move it in its installation spot



NOTE: When installing in a corner, REMOVE the side panel that would have gone into that corner!
This will make the bath sit flush against both walls



Tap and spa power point installation

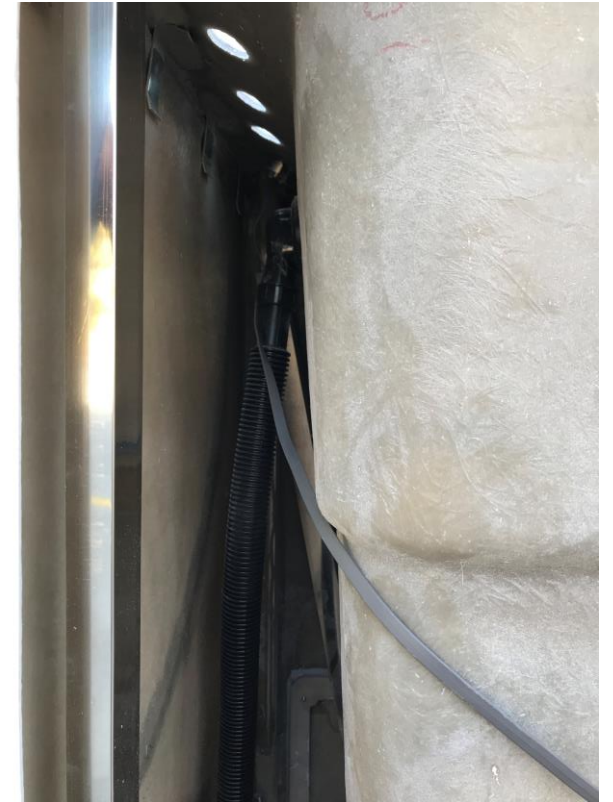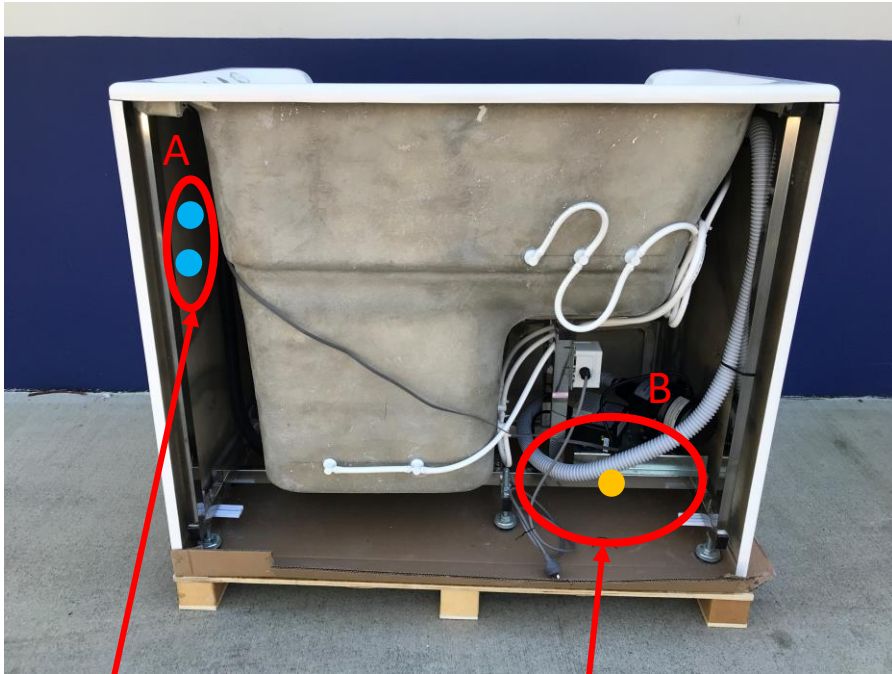

An IP65 (outdoor) rated single power point is required only if the spa option is bought

Suggested water point location A:
800mm from the floor, 80mm from the side panel.
Access circle is 300mm high and 20mm wide


Suggested power point location B:
300mm from the ground, 300mm from the side panel
Access circle is 100mm high and 200mm wide

Each bath is supplied with a high flow spout and ¼ turn tap handles.

These are WaterMark compliant!



The installation start

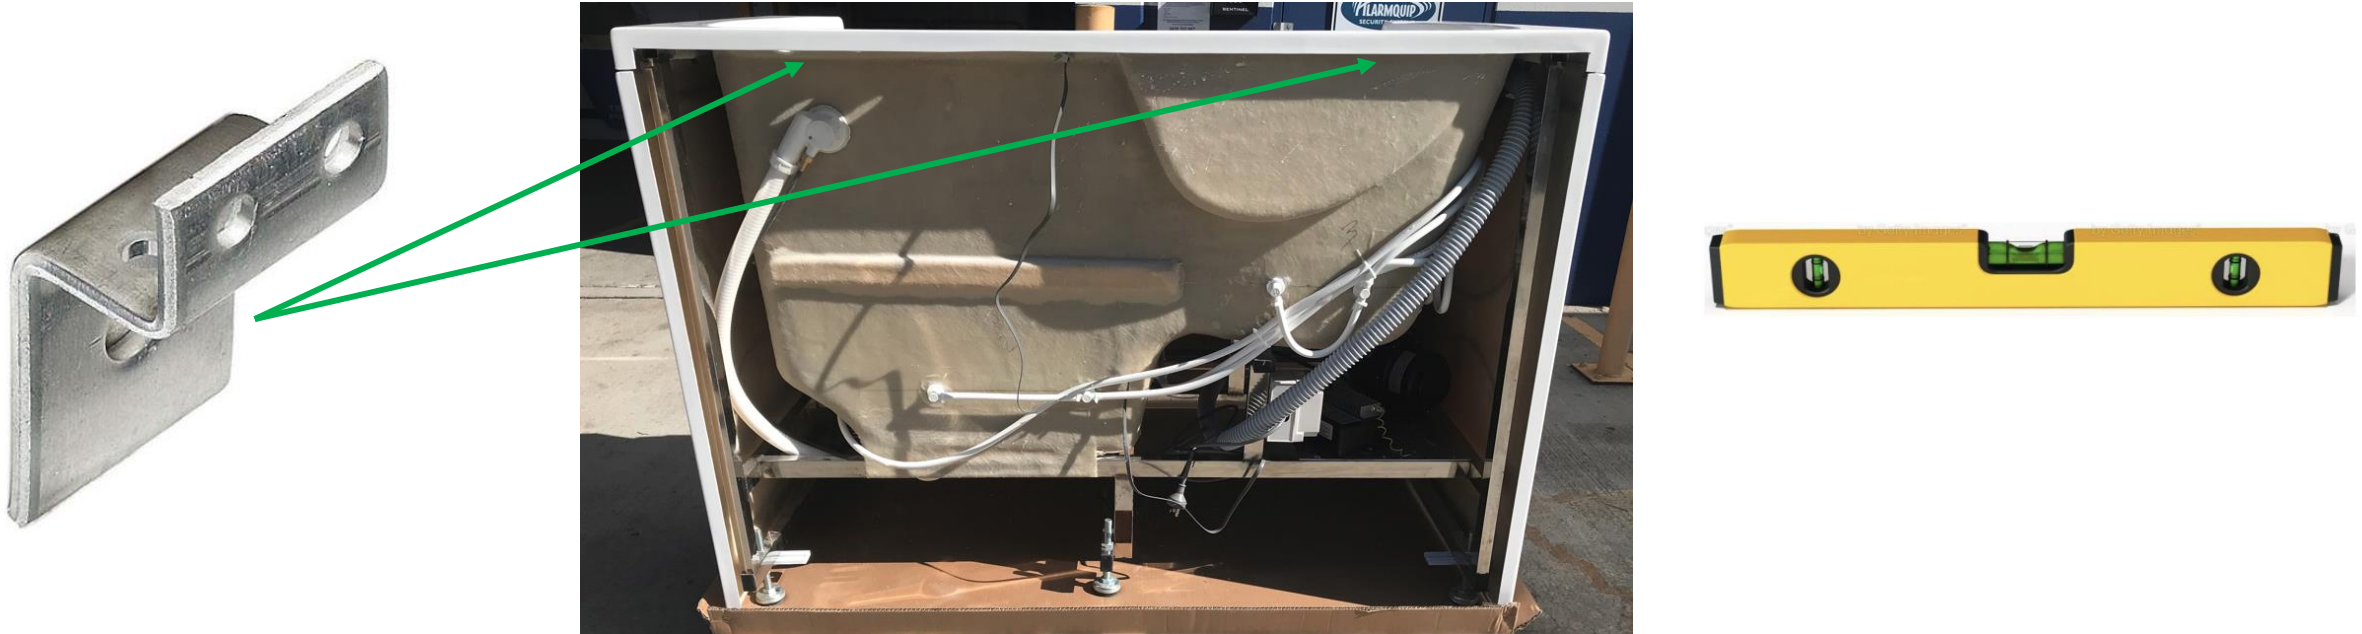


Each bath comes with a drain kit and 2 mounting brackets. These mounting brackets give extra support avoiding the bath coming away from the backwall.

IMPORTANT: The bath needs to be installed **totally level!** Please use a water level for this! A great starting point is to install these mounting brackets on the back wall and make sure these are 100% level installed. Position the back of the bath lip over/on the mounting brackets and adjust each individual bath leg till the bath is completely and accurately level.

The drain kit will be covered a little later in this guide.

Feet adjustment – front middle leg is key! Use it to adjust the door space so the door closes easily and properly (then the seal works best!).
Adjust the other legs around the middle front leg.

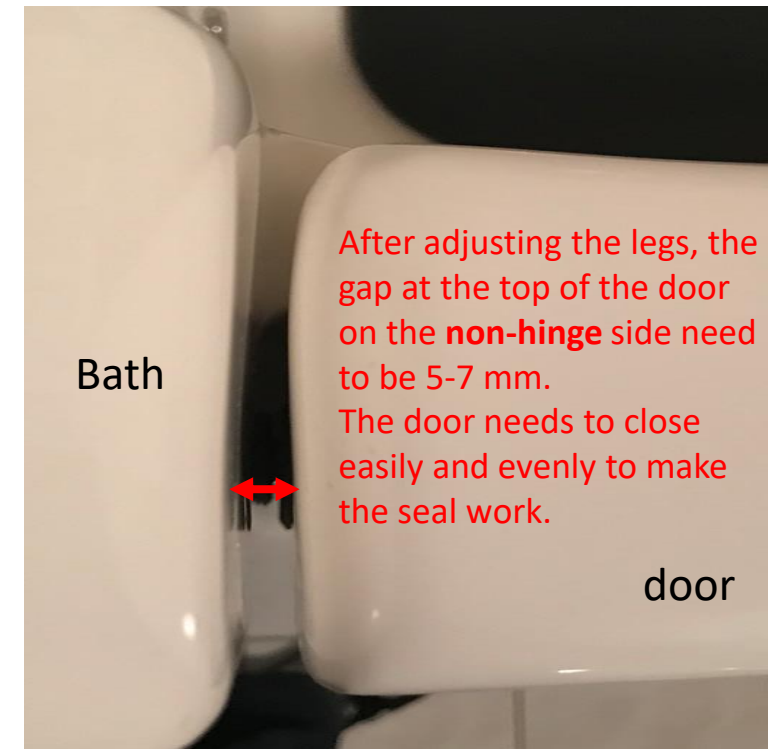

If further fine adjustment is required as part of this process, see the 2nd last page of this guide.

Connecting the waste – each bath is supplied with a 1 meter flexible drain hose. Use this and not a fixed pipe! The hose provides “give” as the bath is a stand alone unit – it avoids risk of leaks



Fine adjustment to avoid/resolve leaking of the bath

ONCE (!) you have installed the bath level AND done the main (rough) adjustment of the middle front leg (the one under the door – see a previous page) AS WELL AS completed the rest of the installation, we strongly suggest you fill the bath with water as a test.

You MAY find that as you fill the bath, that the door still may leak some water during filling or when full of water. In that case we suggest you follow the following process.

1. Remove the cover that is underneath the door so you have easy access to the middle front leg, the one closest to the centre of the door (see red box on left photo).
2. Start filling the bath and as soon as the bath starts to leak, stop the tap and adjust this leg to it pushes the front centre of the bath upwards. Once you start adjusting, the leaking will either get less or worse
 - a. If the leaking becomes worse, adjust the leg the other way (front centre of the bath downwards). The leaking should be reducing now and go to point 2b
 - b. If the leaking reduces, continue with the adjustment till the leaking stops
3. Start filling the bath again. If the bath starts leaking again, go back to point 2.
4. Continue this process till the water reaches the top of the overflow point (= bath is full). Once completed, “lock in the leg with the top and bottom nuts firmly in place. You have now finished the adjustment and the bath can be enjoyed.





Any questions?

Call/text us on Mob 0455 522 566!

